



EXTREME CARE MUST BE TAKEN TO ENSURE THE MOTOR LIMIT TURNS OFF AT THE EXACT MOMENT THE AWNING BOX CLOSES. FAILURE TO DO SO WILL DESTROY THE MOTOR. IMPROPER ADJUSTMENT IS NOT COVERED BY WARRANTY. USE EXTREME CAUTION WHEN ADJUSTING.

05.10.21_Rev.1


ADJUSTING AWNING MOTOR LIMIT SWITCHES

Awning fabric can stretch, potentially requiring an adjustment of limit switches.



SCAN FOR HELP or visit
[StorytellerOverland.com](https://www.StorytellerOverland.com)

RH MOTOR PLACEMENT

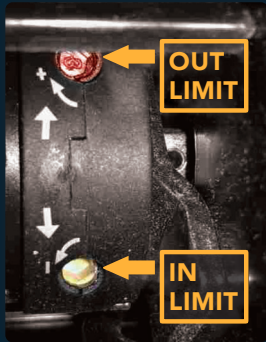

To Adjust the Awning Motor Limit Switches:

- ◆ **Extend the awning a few feet and find the motor on the far right side.** Locate the limit adjustment screws on the motor. These are used to set the motor limits for both OUT (extension) and IN (retraction).
- ◆ **Use this tool to make adjustments.** Turning the IN limit toward the (-) will allow the awning to retract farther. Turning the OUT limit toward the (+) will allow the awning to extend farther. 1/4 turn of adjustment represents about 1" of awning movement.
- ◆ **Setting Extension:** set outward limits so the fabric is taut and the arms are slightly bent. Set limit switch to stop the motor just before the arms lock.
- ◆ **Setting Retraction:** when fully retracted, the awning motor must stop the exact moment the awning box closes.